




ZTE Awe Headphone Jack Replacement

Replace your audio jack in the ZTE Awe if your ears and brain are no longer in musical heaven.

Written By: Jennifer DeMeo

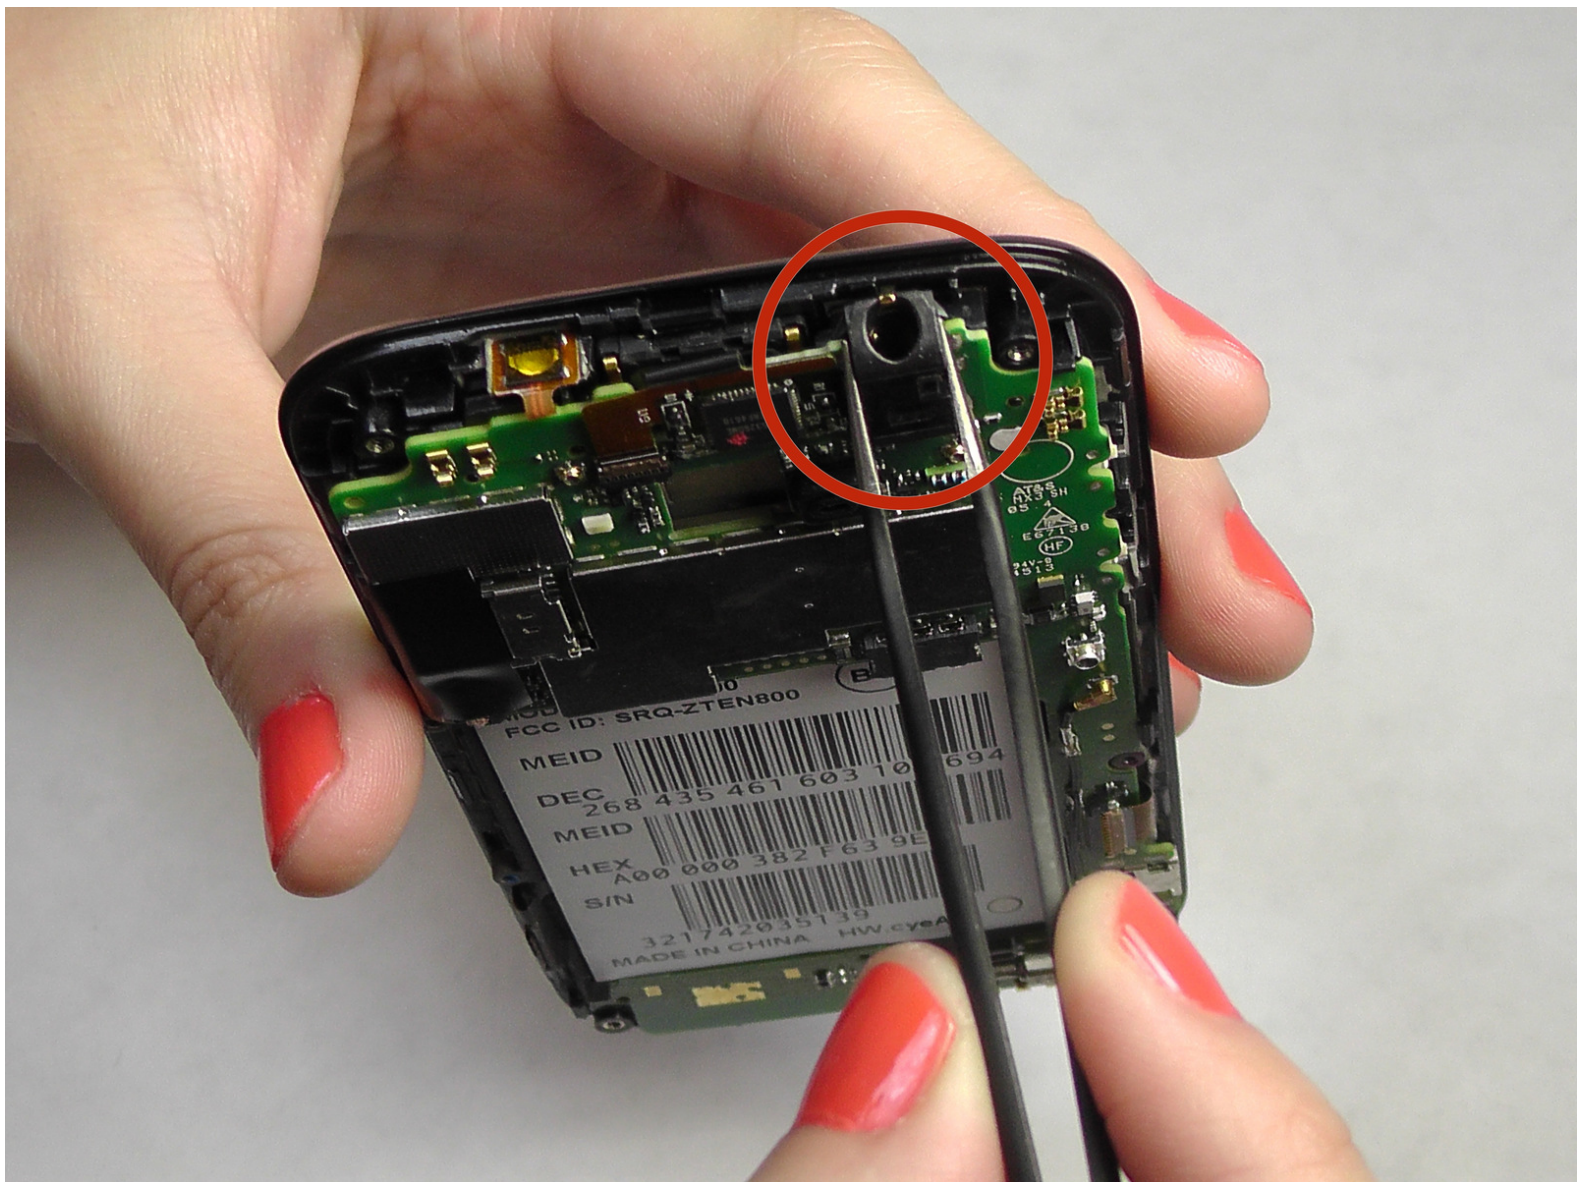

INTRODUCTION

Be cautious when replacing the audio jack-- it is fragile and breaks easily. Tweezers are the optimal tool to use in order to remove and replace the audio jack.



TOOLS:

- [Tweezers](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
 - [Spudger](#) (1)
 - [Essential Electronics Toolkit](#) (1)
-

Step 1 — Remove the back cover




- Remove the back cover of the phone to expose the phone's mid-frame.

Step 2 — Remove battery



- Pry the battery up and out of the phone.

Step 3 — Unscrew the phone's mid frame

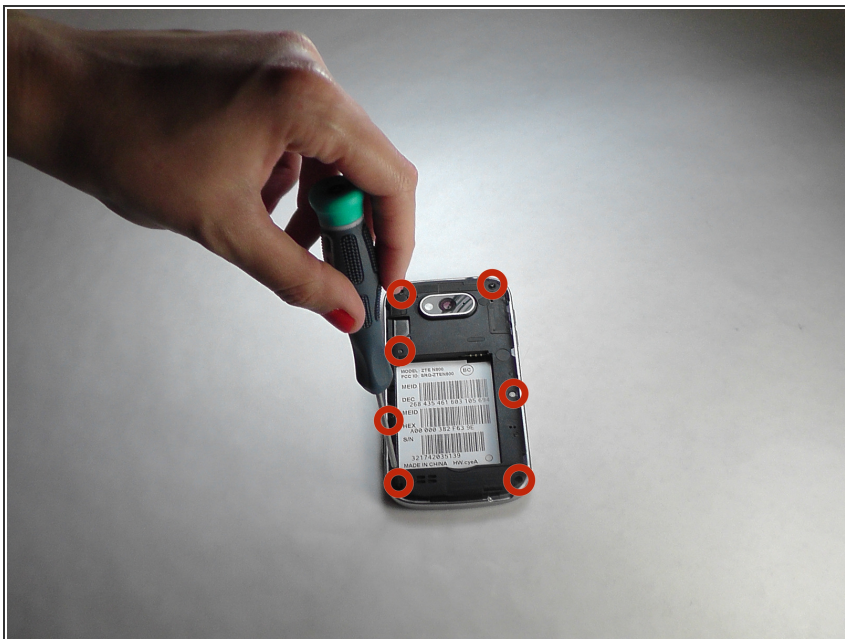


- Use the Phillips Head 00 screw driver to unscrew the seven 0.1mm screws from the phone's mid frame.

Step 4 — Separate the mid frame and the digitizer






- Wedge the flat end of the spudger between the mid frame and the digitizer.

Step 5 — Expose the motherboard

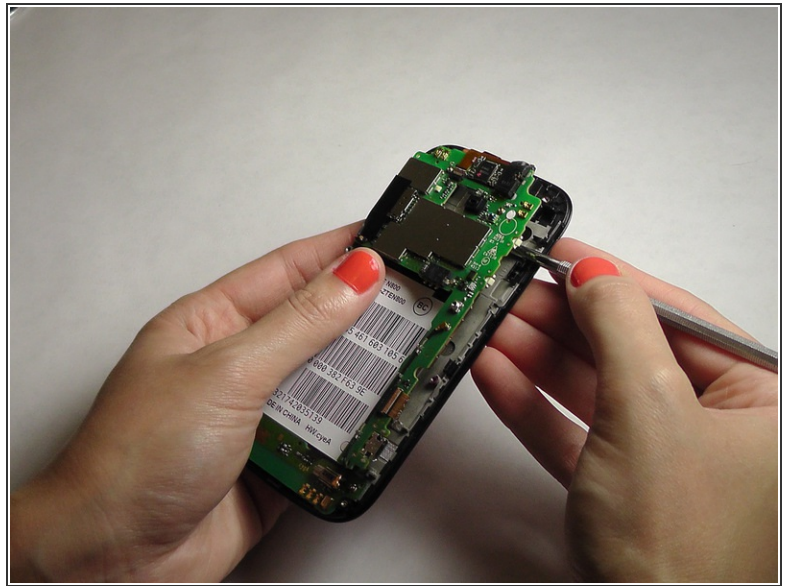

- Gently pry the mid frame away from the rest of the phone to expose the motherboard.

Step 6 — Remove the audio jack

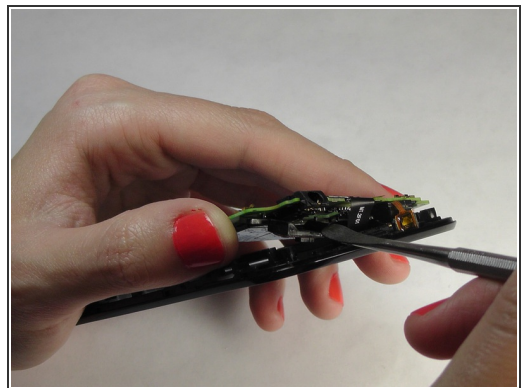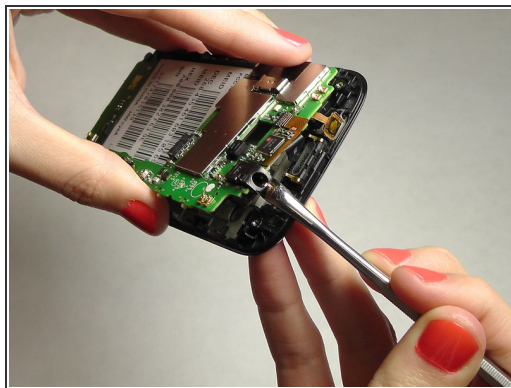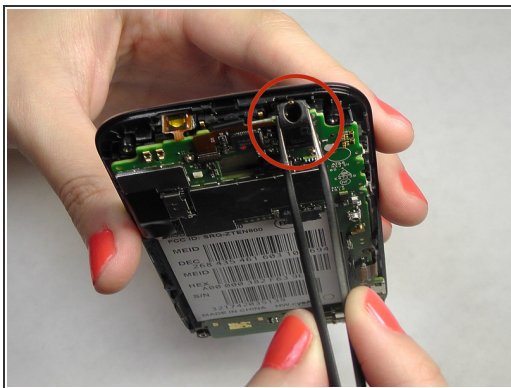

- Locate the audio jack at the upper right hand corner of the device.
- Use the metal spudger to pry the motherboard away from the device.
- Use the metal spudger to unfasten the audio jack and pull it away from the motherboard.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-10-31 03:59:34 AM.